

Cremone Bolt *Measuring Guide*

An **operative Cremone Bolt** features an internal mechanism that moves the upper and lower rods when the knob is turned, allowing them to engage with the end guides or strike plates to secure the door.

A **non-operative Cremone Bolt** is purely decorative, with a fixed knob and rods that do not move or secure the door. The measuring process remains the same for both configurations.

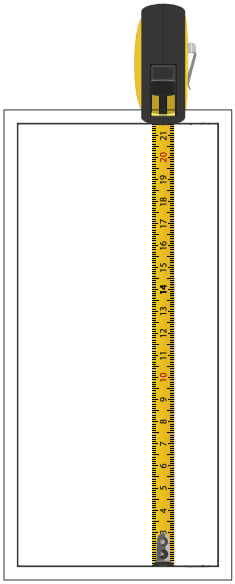

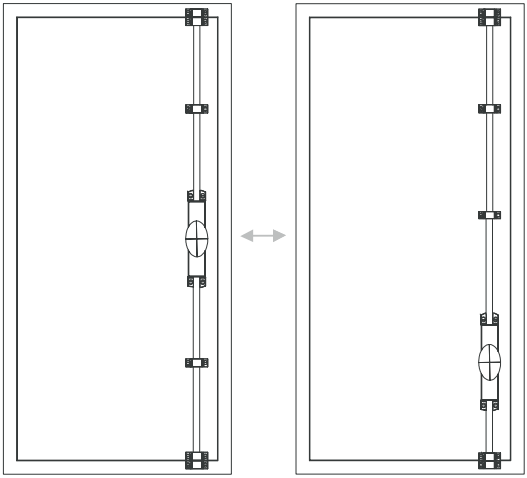

Step 1

Measure the total height of the frame opening, including the door and the clearance gaps above and below.

Step 2

Choose between a centred knob position or a thirds position to suit your door and preferred aesthetic. We can also accommodate bespoke knob positions, determined by measuring from the bottom of the frame opening to the centre of the knob.

The available finishes will depend on your chosen style, configuration and size.

If your required measurements fall outside our standard online offering, please contact our Customer Experience team using the Enquire now option on the product page or email sales@armacmartin.co.uk, and we will be happy to advise further.